


**Timbermate USA, Inc.**  
 Phone: (866) 563-MATE  
 Fax: (773) 262-0488  
 sales@timbermate.com  
 www.timbermate.com

- #1 selling woodfiller in Australia
- Won't sink, shrink, crack or fall out
- Takes every stain & coating flawlessly
- Freeze & thaw stable
- No waste. Unlimited shelf life
- Mixes with any oil or waterbase stain

Color	Size:			
	Qty. 24 (8oz)	Qty. (4lb)/6 1 Quart	Qty. (16lb)/ea. 1 Gallon	Qty. (40lb)/ea. 2.5 Gallons
Australian Cedar/ Spotted Gum/ S. Chestnut	AC25	AC2	AC8	AC20
Australian Cypress	AAC25	AAC2	AAC8	AAC20
Brazilian Cherry/ Jarrah	ABC25	ABC2	ABC8	ABC20
Brush Box	BB25	BB2	BB8	BB20
Cherry	AMC25	AMC2	AMC8	AMC20
Mahogany/ Sydney Blue Gum	AAM25	AAM2	AAM8	AAM20
Maple/Beech/Ash/ Pine	AMB25	AMB2	AMB8	AMB20
Natural/Tint Base	ATB25	ATB2	ATB8	ATB20
Red Oak	ARO25	ARO2	ARO8	ARO20
Rustic/Ebony	AE25	AR2	AR8	AR20
Tasmanian Oak/ Hardwood	TAO25	TAO2	TAO8	TAO20
Walnut	AW25	AW2	AW8	AW20
White	AWH25	AWH2	AWH8	AWH20
White Oak	AWO25	AWO2	AWO8	AWO20

**Please Follow  
 These Easy Directions  
 When Applying  
 Timbermate Woodfiller.**

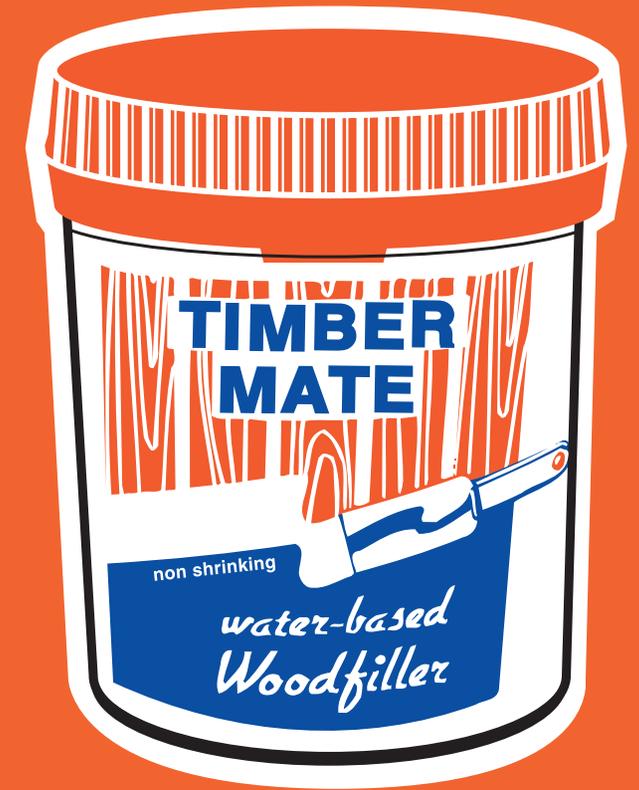

## Before Proceeding Please Note:


• **Timbermate will dry lighter and return to its original color once the final finish is applied.**

• **Timbermate can be mixed with any tint or stain to achieve a custom color.**




### For Spot Patching


**1. APPLY:** If staining, use Timbermate Natural/Tint Base. Otherwise match the color to the wood. Using a plastic or high quality stainless steel putty knife, apply Timbermate to the floor directly out of the tub prior to the last sanding. (NOTE: If filler turns black, the putty knife is not high content stainless steel; however, the black will sand off.)

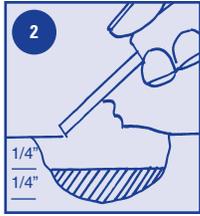

**2. FILL:** If hole is greater than 1/4", fill by layering Timbermate in 1/4" increments.

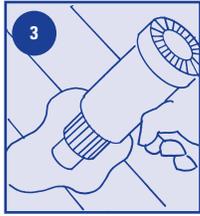

**3. DRY:** Let Timbermate dry thoroughly. Use a heat gun or similar to speed drying time if desirable. (Timbermate is properly dry if it sands to the consistency of baby powder.)


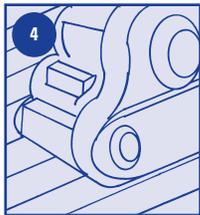


**4. SAND:** Final sand and remove all dust and debris.

**5. STAIN:** Apply stain to the floor (if staining).



**6. FINISH COAT:** Apply any final finish coat.

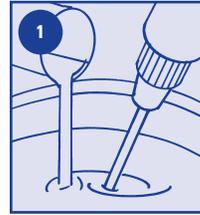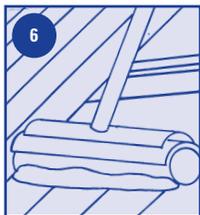


### For Trowel Filling


**1. MIX:** If staining, use Timbermate Natural/Tint Base. Otherwise match the color to the wood. Mix Timbermate in the tub with warm water (a mixer attached to a heavy duty drill is ideal). Slowly pour the water in as you mix – usually about 15% water by weight. Mix until Timbermate has the consistency of toothpaste.



**2. APPLY:** Apply Timbermate, just before the final sand, with a plastic trowel, or rubber float across the grain over the entire floor. Make sure the filler is forced into deep voids. Do not apply Timbermate too heavily – a small amount goes a long way. Remove all excess Timbermate. (Return excess to the Timbermate container-no waste.)

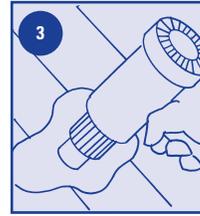


**3. DRY:** Let Timbermate dry thoroughly. Use a heat gun or similar to speed drying time if desirable. (Timbermate is properly dry if it sands to the consistency of baby powder.)


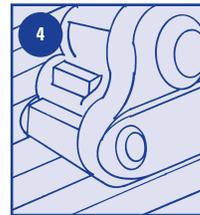


**4. SAND:** Final sand and remove all dust and debris. (If grain filling do not use a grit coarser than 120.)

**5. STAIN:** Apply stain to the floor (if staining).

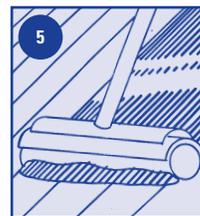


**6. FINISH COAT:** Apply any final finish coat.

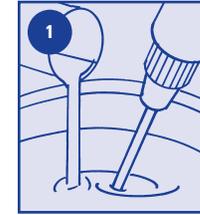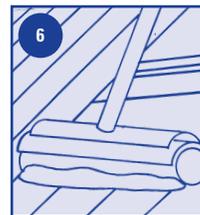


### For Grain Filling (filled finish)

**1. MIX:** If staining, use Timbermate Natural/Tint Base. Otherwise match the color to the wood. Mix Timbermate in the tub with warm water (a mixer attached to a heavy duty drill is ideal). Slowly pour the water in as you mix – Timbermate should have the consistency of thick paint. Allow Timbermate mixture to dry to the consistency of toothpaste before sealing tub.

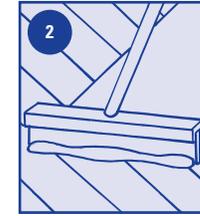


**2. APPLY:** Just before the final hard plate or screening, apply Timbermate by flooding the floor and squeegee it across the grain over the entire floor. Do not apply Timbermate too heavily – a small amount goes a long way. Remove all excess Timbermate (return excess to the Timbermate container-no waste).

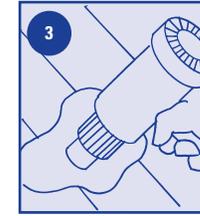


**3. DRY:** Let Timbermate dry thoroughly. Use a heat gun or similar to speed drying time if desirable. (Timbermate is properly dry if it sands to the consistency of baby powder.)



**4. SAND:** Final hard plate or screen and remove all dust and debris. (NOTE: Do not use a grit coarser than 120.)

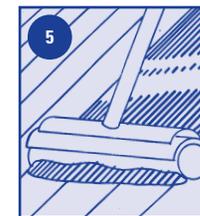

**5. STAIN:** Apply stain to the floor (if staining).

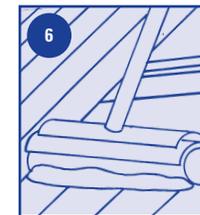

**6. FINISH COAT:** Apply any final finish coat.